

WorldWEIGH C100 / 100lb Counting Scale Remote Base Configuration

Wiring: Pin 1 = Signal + White Pin 4 = Excitation - Black
 Pin 2 = Signal - Green Pin 5 = Excitation + Red
 Pin 3 = Shield Blue

- Hold "Pst" button while powering on, display will show "F1 oFF"
- Use "Sample" key to advance to "tECH"
- Press "Tare", display shows "Pin"
- Type "9999", then press "Tare"
- Display shows "tECH LoCAL". Press "Local/Remote" button, display shows "tECH rEMotE"
- Press "Tare", display shows "tECH Unit". Make sure "lb" annunciator on display is lit. If not, press "U.Wt./Units" to toggle
- Press "Tare", display will show "Cnt". Press "Tare" again to display internal counts, or press "Sample" to advance. Display will show "CAP".
- Press "Tare". Display will show "dESC 0.000". This is the decimal point parameter. If the displayed value is correct, press "Tare". To cycle through the parameter choices, press "Sample". When the displayed value is correct, press "Tare".
- Display will show "SEL 000060". This is the capacity, Type the desired capacity via the numeric keypad, then press "Tare".
 **Note: "CE" key can be pressed to clear the entry
- Display will show "inC 2". This is the division size parameter. If the displayed value is correct, press "Tare". To cycle through the parameter choices, press "U.Wt./Units". When the displayed value is correct, press "Tare".
- Display returns to "CAP", this is the end of the setup for the remote base.
- Press "Zero", the scale will save changes and re-boot.