

# WorldWEIGH C100 Counting Scale Remote Base Configuration

Wiring: Pin 1 = EX+      Pin 7 = Signal -  
           Pin 5 = EX-      Pin 8 = Signal +

- Hold “Pst” button while powering on, display will show “F1 oFF”
- Use “U.Wt/Units” key to advance to “tECH”
- Press “Tare”, display shows “Pin”
- Type “9999”, then press “Tare”
- Display shows “tECH LoCAL”. Press “Local/Remote” button, display shows “tECH rEMotE”
- Press “Tare”, display shows “tECH Unit”. Make sure “lb” annunciator on display is lit. If not, press “U.Wt./Units” to toggle
- Press “Tare”, display will show “Cnt”. Press “Tare” again to display internal counts, or press “U.Wt/Units” to advance. Display will show “CAP”.
- Press “Tare”. Display will show “dESC 0.000”. This is the decimal point parameter. If the displayed value is correct, press “Tare”. To cycle through the parameter choices, press “U.Wt./Units”. When the displayed value is correct, press “Tare”.
- Display will show “SEL 000060”. This is the capacity, Type the desired capacity via the numeric keypad, then press “Tare”.  
 \*\*Note: “CE” key can be pressed to clear the entry
- Display will show “inC 2”. This is the division size parameter. If the displayed value is correct, press “Tare”. To cycle through the parameter choices, press “U.Wt./Units”. When the displayed value is correct, press “Tare”.
- Display returns to “CAP”, this is the end of the setup for the remote base.
- Press “Zero”, the scale will save changes and re-boot.

