

WorldWEIGH C100 Remote Base Counting

Items that are already on a pallet or in a container can be counted on a remote floor scale base. A sample of the parts will be taken on the local counting scale base, and then a tare can be entered for the pallet or container holding the items on the remote floor scale base.

Operating Instructions:

1. Place pallet or container of parts on floor scale.
2. Be sure local base is selected on counting scale. Press “Local/Rem” key to toggle (if necessary)
3. Place sample parts on platform of counting scale.
4. Type # of sample parts on keypad, followed by “Smpl” key.
5. Press “Local/Rem” to switch to floor scale.

Number of pieces will be displayed for the remote floor scale.

To keypad-tare (for pallet or container):

Type in tare weight on the numeric keypad, followed by the “Tare” key.

Number of pieces, minus the tare weight of the pallet or container, will be displayed.